

# ***TRAMEX***

## ***Skipper Plus***

**MOISTURE METER  
FOR THE MARINE INDUSTRY**

Non-Destructive Moisture  
Detection Instrument for GRP  
(Glass Reinforced Plastic)  
and Wooden Boats

## **User Guide**

 **TQC**  
[WWW.TQC.EU](http://WWW.TQC.EU)

TQC B.V.  
Molenbaan 19  
2908 LL Capelle a/d IJssel  
The Netherlands

☎ +31 10 7900100  
☎ +31 10 7900129  
✉ [info@tqc.eu](mailto:info@tqc.eu)  
🌐 [www.tqc.eu](http://www.tqc.eu)

# *Skipper Plus* User Guide

Introduction .....	4
Fig. 1 Skipper Plus Non-Destructive Testing ....	4
Instrument Features .....	5
Diagnosis .....	6
Osmosis in GRP.....	7
Wooden Boats .....	7
Important .....	8
Operating Instructions .....	8
Fig 2. Skipper Plus Features .....	9
Working With Your Skipper Plus .....	11
<i>RANGE 1</i> .....	11
Testing Hardwood.....	11
Wood Decking.....	12
Depth Of Field Penetration .....	12
Relationship Between Relative Humidity and Moisture Content .....	13
Fig. 3 Relative Humidity / Wood Moisture Content Relationship.....	13
Notes on Specific Gravity (S.G.) .....	13
Fig 4. Wood Density Categorisation. ....	14
How to use the Wood SG Tables .....	14
Fig. 5. Wood Specific Gravity Adjustment Table .....	14
<i>RANGE 2</i> .....	15
Testing Glass Reinforced Plastic (G.R.P.) .....	15
<i>RANGE 3</i> .....	15
Testing for Elevated Surface Moisture .....	15
Notes .....	16
Warranty.....	17
Warranty Claims .....	18
Product Development .....	18

# *Skipper Plus*

## User Guide

### **TRAMEX MOISTURE/HUMIDITY INSTRUMENTS**

#### **SURVEY ENCOUNTER: The intelligent moisture meter.**

“State of the art” non-destructive moisture meter for measurement and data logging of moisture in building materials.

#### **MOISTURE ENCOUNTER PLUS**

General purpose non-destructive moisture meter employing advanced analog and digital technology.

#### **CONCRETE ENCOUNTER CME 4**

Non-destructive moisture meter for concrete floors.

#### **CRH FLOORING**

Non-destructive testing and data logging of moisture content and relative humidity measurements in concrete (*to ASTM F 2170-02, ASTM F 2420-05 and BS 5325:2001 & 8203:2001*), gypsum screeds and sub-floors.

#### **FLOOR INSPECTION KIT**

Complete kit for moisture testing concrete, hardwood flooring, sub-flooring and environmental monitoring.

#### **MRH**

Digital Moisture and Humidity Meter with 4 scales for wood, roofing, masonry and drywall. Humidity probe also available. Suitable for humidity testing of flooring by either the in situ probe method (*to ASTM F 2170-02 and BS 5325:2001 & 8203:2001*) or the RH hood method (*ASTM F 2420-05*).

#### **PROFESSIONAL MOISTURE METER**

Digital resistance meter with probes, tests deep into wood.

#### **COMPACT MOISTURE METER**

Economical pin-type resistance meter for wood.

#### **DEC SCANNER**

Mobile non-destructive surveying of flat roofs.

#### **WET WALL DETECTOR**

Non-destructive moisture evaluation and tracing in EIFS.

#### **RWS ROOF AND WALL SCANNER.**

For moisture scanning and leak tracing on roofing, EIFS and the building envelope.

#### **MOISTURE & HUMIDITY INSPECTION KITS ARE AVAILABLE FOR THE FOLLOWING INDUSTRIES:**

Floor inspection / EIFS wall inspection / Roof inspection / Indoor Air Quality / Water damage restoration.

# *Skipper Plus*

## User Guide

### **Introduction**

The *Skipper Plus* is a moisture detection instrument that uses the latest in electronic technology to take non-destructive moisture readings in GRP (Glass Reinforced Plastic) and wooden boats. It enables you to quickly check hulls and decks both inside and outside for trapped moisture.


Your *Skipper Plus* meter features three Ranges enabling you to select the correct range for the material and environment in which you are working. Use Range 1 to give you the percentage moisture content in Wood. Use Range 2 to indicate on the comparative scale, moisture in GRP and use Range 3 to indicate Surface Moisture on the comparative scale.

The instrument operates on the principle that the electrical impedance of a material varies with its moisture content. To measure / detect moisture, the two co-planar conductive rubber electrodes mounted on the base of the instrument case are pressed onto the wood or GRP sample. The instrument measures the electrical impedance of the material being tested by creating a low frequency alternating electric field between the electrodes.

This field penetrates the material under test up to a depth of approximately 30 mm (1.25 inches), depending on material being tested and range used. The very small current flowing through the field is inversely proportional to the impedance of the material. The instrument detects this current, determines its amplitude and, after processing, drives the pointer of the moving coil meter to the computed moisture value.

# Skipper Plus User Guide

**Fig. 1 Skipper Plus Non-Destructive Testing**

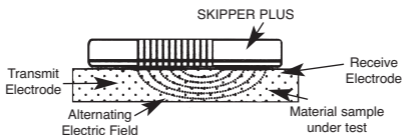

As there is a wide variation in the nominal electrical impedance of different material types, the instrument is provided with three selectable ranges which are optimized for testing (1) Hardwood, (2) GRP and (3) Surface Moisture.

## Instrument Features

Your *Skipper Plus* employs advanced analog and digital technology to enable the incorporation of many useful features, which greatly extend the capability of the instrument.

- Three simple pushbutton controls, ON, RANGE and HOLD.
- Non-destructive moisture readings taken in Wood from 5% to 30% are displayed on a clear, easy to read moving coil meter with a linear scale. Comparative readings between 0 and 100 can be taken in GRP.
- Audio signal sounds when meter indicates high reading and can be disabled if required.

## *Skipper Plus* User Guide

- The HOLD button freezes moving coil meter, which facilitates readings taken out-of-sight.
- If HOLD was selected prior to supply timeout, the held reading is restored next time the meter is powered on.
- Automatic supply timeout (2 minutes) conserves battery life.
- Supply timeout is automatically extended if a change in the meter reading is detected or if any button is pressed.
- Bleep warning on instrument sounder 10 seconds prior to end of supply timeout period.
- Last used RANGE is memorized at supply timeout and automatically selected next time ON button is pressed.
- Three LEDs indicate selected range, indicate if HOLD selected and provide warning of battery nearing end of useful life.

### **Diagnosis**

Your *Skipper Plus* can be used to diagnose trapped moisture which can contribute to osmosis in GRP boats and rot and decay in wooden boats and wooden components. The *Skipper Plus* is also essential in monitoring drying out of hulls and other boat components prior to remedial treatment.

## *Skipper Plus* User Guide

### **Osmosis in GRP**

Use Range 2 when checking GRP boats. Osmosis is a general term used to categorise a condition where GRP degrades under water. This degradation is caused by water penetrating the gel coat and reacting chemically with uncured resins, binders and other elements in the GRP lay-up. Once reaction takes place, pressure builds up and eventually blisters form.

Osmosis is most often found on the underwater area of the hull or immediately above the waterline. If the *Skipper Plus* gives a high reading, it may indicate osmosis. It is recommended that the immediate area is thoroughly examined for blistering or other evidence of osmosis.

(Note that some anti-foulings may give elevated readings due to the presence of conductive material in its composition. In these circumstances, it is suggested that the anti-fouling be removed and further testing carried out on the area.) The *Skipper Plus* can be used to monitor the drying out prior to the remedial treatment. Tramex Ltd. cannot accept any responsibility for incidental or consequential damage or cost caused as a result of using this instrument.

### **Wooden Boats**

Use Range 1 for Wooden boats. Moisture readings for wood should be read from the top scale of the meter marked %H<sub>2</sub>O Wood, which gives percentage of moisture by weight from 5% to 30%.

In wooden boats, excess moisture trapped in the wood itself or beneath layers of paint or within joints

## ***Skipper Plus*** **User Guide**

in keel, bow etc. can lead in time to rot, decay and structural damage.

As with a GRP boat, your *Skipper Plus* is a useful preventative maintenance tool which can be used for the annual examination of the hull above and below the waterline, decks, cabin and inside and outside the boat.

The *Skipper Plus* can also be used to ensure the wood is sufficiently dry to accept paint or other coatings.

### **Important**

Always drain water from the bilges before inspecting a boat as water from within the boat could be detected through the hull by your *Skipper Plus*. You may get a slightly different reading from some species of wood which may be of higher or lower density than 0.6 S.G. (Hardwood), at which your *Skipper Plus* is calibrated. See notes on Specific Gravity and reading adjustment in Fig. 5 on page 11.


### **Operating Instructions**

The instrument face with brief notes on the push button controls and LED indicators is shown below.



# Skipper Plus User Guide

Fig 2. Skipper Plus Features

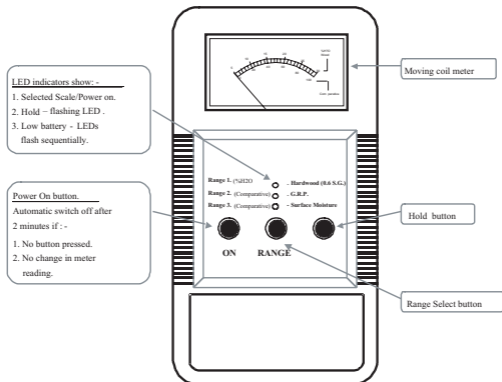

1. Press the ON button to power up. The LED for the last used scale will light. [Note – If the battery voltage is getting low, the three LEDs will flash sequentially for a short period. The instrument will continue to operate for some time but it is recommended that the PP3 (9 volt) battery be changed as soon as convenient.]
2. To change range, press/release the **RANGE** button until the LED opposite the required range lights.
3. Press and hold your *Skipper Plus* directly on the material being tested, ensuring both conductive rubber electrodes are fully in contact with the sur-

## *Skipper Plus* User Guide

- face. (Partial contact will give reduced readings).
4. Select **RANGE 1** when measuring moisture content in Wood and read the upper line (% H<sub>2</sub>O Wood) of the meter dial which is marked from 5% to 30%. The audio signal will sound when meter indicates a reading above mid scale.
  5. Select **RANGE 2** when surveying or inspecting a GRP hull or fitting and read the bottom comparative scale, which is marked from 0 to 100.
  6. Select **RANGE 3** when testing for elevated near surface moisture in GRP and Wood materials and read the bottom comparative scale, which is marked from 0 to 100.
  7. To turn audio signal on or off, press ON button twice in quick succession.
  8. The instrument will automatically power-off after two minutes if no button is pressed or if no change in meter reading is detected. If a button is pressed or the meter reading changes, the power-off will be extended for a further two minutes.
  9. To hold readings press the **HOLD** button once. While on Hold, the LED for the selected range will flash. This facility is extremely useful if readings are being taken in areas where it is difficult to see the instrument dial. To release HOLD, press the **HOLD** button again.

# *Skipper Plus* User Guide

## Working With Your *Skipper Plus*

### **RANGE 1**

#### Testing Hardwood

- a) When testing Wood, power-on, select **Range 1** and press the rubber electrodes directly to the surface. Read the moisture content percentage from the top line of the analog dial which is marked from 5% to 30%. The *Skipper Plus* has been calibrated for a hardwood specific gravity of 0.6 S.G.
- b) If switched on, the audio signal will sound when readings are above mid-scale.
- c) For better accuracy, always take readings with the length of the instrument parallel to the direction of the wood grain.
- d) Acceptable levels of moisture content depend on climatic conditions and we advise you to check the levels acceptable in your area. Figure 3 on page 10 shows the approximate relationship between the ambient relative humidity and equilibrium moisture content in woods.
- e) As a rule of thumb and depending on climatic conditions, exterior wood is generally considered safe for painting when the moisture content is 14% or below. Wood below 10% is generally considered suitable for interior painting. (Always check coating manufacturers recommendations).
- f) The following moisture content levels are given as a guide.
  - Indoors wood: 6% in low humidity areas. Up to 12% in higher humidity locations.

## ***Skipper Plus*** **User Guide**

- Exterior wood: 10% to 15% depending on local humidity levels.
- Generally, wood moisture content in excess of 23% - 27% is susceptible to rot.
- Wood moisture content in excess of 18% - 20% may support mold and biological growth.
- Wood above 28% moisture content is considered to have reached fibre saturation point.

When taking readings in chemically treated wood, it is advisable to allow for possible effects that the treatment may have on readings. The presence of different treatments, adhesives, etc. on or within products could affect measurements.

### **Wood Decking**

Excess moisture in wood decking or wooden ribbing or framework can cause major problems, as will moisture trapped in balsa cored construction.

### **Depth Of Field Penetration**

Depending on the density of the material being tested, the instrument field can penetrate up to approximately 30mm (1.25 inches) below the surface.

Your *Skipper Plus* can be used to measure the elevated moisture of all the wooden parts in your boat, even those encased in GRP. Likewise it can be used to check elevated moisture in other electrically non-conductive materials.

## *Skipper Plus* User Guide

### **Relationship Between Relative Humidity and Moisture Content**

The table below shows the approximate relationship between the relative humidity and the equilibrium moisture content of some woods. (These figures are approximate values at a temperature of 70°F (21°C) and may vary for different species.).

**Fig. 3 Relative Humidity / Wood Moisture Content Relationship**

Relative Humidity	Wood MC%
10%	3 to 5
20%	5 to 6
30%	6 to 8
40%	8 to 9
50%	9 to 11
60%	11 to 13
70%	13 to 15
80%	16 to 19
90%	20 to 22
100%	25 +

### **Notes on Specific Gravity (S.G.)**

The S.G. of Hardwood used in boat building varies between species and this has an effect on moisture meter readings.

The *Skipper Plus* calibration is based on Wood having an SG of 0.60.

## *Skipper Plus* User Guide

Wood is normally categorised as follows: -

**Fig 4. Wood Density Categorisation.**

Density	SG @ 12% MC
Exceptionally Light	0.30 or less
Light	0.30 to 0.45
Medium	0.45 to 0.65
Heavy	0.65 to 0.90
Exceptionally Heavy	0.90 or more

### How to use the Wood SG Tables

When testing wood, which does not have an SG of 0.60, the meter reading can be adjusted by referring to the tables shown below. For example, if the wood being tested has an SG of 0.80 and the meter reading is 16% (top row of table) then the adjusted moisture content reading can be found where the 0.8 0 SG row intersects with 16% meter reading column. For this example the adjusted moisture content would be 13%.

**Fig. 5. Wood Specific Gravity Adjustment Table**

<b>WOOD SPECIFIC GRAVITY ADJUSTMENT TABLE</b>													
Meter Reading On Wood Scale (%H <sub>2</sub> O)													
	6	8	10	12	14	16	18	20	22	24	26	28	30
<b>S.G.</b>													
<b>0.3</b>	10	13	16	18	21	23	26	30	32	35	39	41	44
<b>0.4</b>	8	10	14	16	18	20	24	26	29	32	34	37	40
<b>0.5</b>	7	9	12	14	16	18	21	24	26	29	31	34	36
<b>0.6</b>	6	8	10	12	14	16	18	20	22	24	26	28	30
<b>0.7</b>	5	7	9	11	13	14	17	18	20	22	23	25	26
<b>0.8</b>	4	6	8	10	12	13	15	16	18	20	21	23	24
<b>0.9</b>	4	5	7	9	11	12	14	15	16	18	20	22	23

## *Skipper Plus* User Guide

### **RANGE 2.**

#### **Testing Glass Reinforced Plastic (G.R.P.)**

- a) The presence of moisture trapped between the lay-up and the gel coat can cause blistering in the coating of the hull. Your *Skipper Plus* can be used to locate unwanted moisture.
- b) When moisture has penetrated the gel coating, severe blistering will result. Testing the hull surface below the waterline and comparing the readings with the dry areas above the waterline can assist in identifying areas of osmosis.

Because of its deep signal penetration (up to 30mm or 1.25"), your *Skipper Plus* can identify areas where osmosis, or the potential for osmosis development, is present when used on RANGE 2. Readings should be taken from the comparative scale (0 to 100) on the meter dial.

### **RANGE 3.**

#### **Testing for Elevated Surface Moisture**

The *Skipper Plus* can be used in RANGE 3 to detect moisture on or just below the surface. This can be of great benefit in verifying if high moisture readings on Range 1 or 2 are as a result of deep set moisture, surface moisture or conductive coatings.

Range 3 is also very useful when checking if the surface is dry prior to painting or coating.

## *Skipper Plus* User Guide

Tests should be carried out on a comparative basis selecting the most appropriate Range , and readings should be taken from the 0 to 100 comparative scale on the meter dial.

### Notes

- a) Your *Skipper Plus* is calibrated to give %H<sub>2</sub>O moisture readings when set on Range 1 in Hardwood of 0.6 S.G. This reading is displayed on the upper scale of the meter and is marked %H<sub>2</sub>O Wood. When taking readings on other boat construction materials such as GRP or composite, the readings are qualitative or comparative and should be taken from the lower 0 to 100 scale on meter.
- b) It should also be noted that when taking readings on materials of a thickness of less than 25mm., the substrate of these materials may have affect on the readings.
- c) The moisture profile of a hull can be determined by sliding your *Skipper Plus* across the surface where it will read through most thinly applied paints and coatings.
- d) The rubber electrodes of the *Skipper Plus* do not scratch the protective coverings of the hull.
- e) The *Skipper Plus* will help identify the different levels of moisture even if not apparent on the surface.



## ***Skipper Plus*** **User Guide**

- f) Always consult coating or treatment manufacturers recommendations for acceptably dry levels.
- g) The ***Skipper Plus*** will not detect or measure moisture through any electrically conductive materials or coatings including fuel tanks or through bulk heads or wet surfaces.

### **Warranty**

Tramex warrants that this instrument will be free from defects and faults for a period of one year from date of first purchase. If a fault develops during the warranty period, Tramex, at its option, will either repair the defective product without charge for the parts and labour, or will provide a replacement in exchange for the defective product returned to Tramex Ltd.

This warranty shall not apply to any defect, failure or damage caused by improper use or improper or inadequate maintenance and care. In no event shall Tramex, its agents or distributors be liable to the customer for any special, indirect, or consequential loss or damage of any type whatsoever (including, without limitation, loss of business, revenue, profits, data, savings or goodwill), whether occasioned by the act, breach, omission, default, or negligence of Tramex Ltd., whether or not foreseeable, arising howsoever out of or in connection with the sale of this product including arising out of breach of contract, tort, misrepresentation or arising from statute or indemnity.

## ***Skipper Plus*** **User Guide**

Without prejudice to the above, all other warranties, representations and conditions whether made orally or implied by circumstances, custom, contract, equity, statute or common law are hereby excluded, including all terms implied by Section 13, 14 and 15 of the Sale of Goods Act 1893.

### **Warranty Claims**

A defective product should be returned shipping prepaid, with full description of the defect to your supplier or Tramex at address shown on the back page.

### **Product Development**

It is the policy of Tramex to continually improve and update all its products. We therefore reserve the right to alter the specification or design of this instrument without prior notice.





TQC bv  
Molenbaan 19  
2908 LL Capelle a/s IJssel  
The Netherlands

☎ +31 10 7900100

📠 +31 10 7900129

@ info@tqc.eu

🌐 www.tqc.eu